

CE MINI SUBSEA CLAW



The Mini Subsea Claw is designed to be able to grab and extract all types of debris weighing up to 1.5 tonnes from inside an 18” Riser, a Cassion or a confined space. The Claw is versatile and can be deployed vertically which allows it to enter into an even more confined space and allows you to either grab or break the debris into smaller more manageable chunks. It can also be deployed horizontally using the two Eye Bolts shown above.



With our latest Hand Pump it allows the user to adjust the sensitivity of the Claw. With the sensitivity set to minimum, the Claw will not break fragile anodes or electrical cables but will be able to hold these objects and recover them as a whole. The sensitivity of the Claw can be adjusted any time from the Hand Pump. All tools are provided for setting the sensitivity.

The two Gages show the sensitivity. Once set, they cannot be overridden. The user can stroke the pump but the Claw will simply maintain its preset grab. However, this does not have any effect on the Claw fully opening or closing. The Claw will still give 100mm opening and it closes fully like a scissors.

The Claw can be used to prise open equipment as well as cut and grab. The two Eye Bolts on the side can easily be removed if the Claw is not being used in a horizontal position. If used in the vertical position, the user can retrieve debris or particles from an 8” pipe.

The Claw is fitted with stainless steel quick connects which make it simple to deploy and install and comes complete with 25M, 50M,100M or up to 500M Hoses. The Hand Pump is fitted on a base that sits on any desk or frame work and is also fitted with quick connects that make it easy to install and has a 1.5 litre hydraulic fluid reservoir.

Simple to use.

Push connect the Hoses to the Subsea Claw, the other end connect to the dual action Hand Pump.

Push centre lever to the left, as you stroke the Pump, the Claw will close.

If placed in the centre the Claw is placed at its present position.

Push lever to right, stroke the Pump and the Claw will open.

Position lever in centre and the Claw will lock at its present position.

Once desired setting is reached, stroking the Pump will not exceed the sensitivity of the Claw.

Size : 34cm Long x 11cm Wide x 18cm Deep.

